


1080P Dual DVR Dash Cam Quick Start Guide

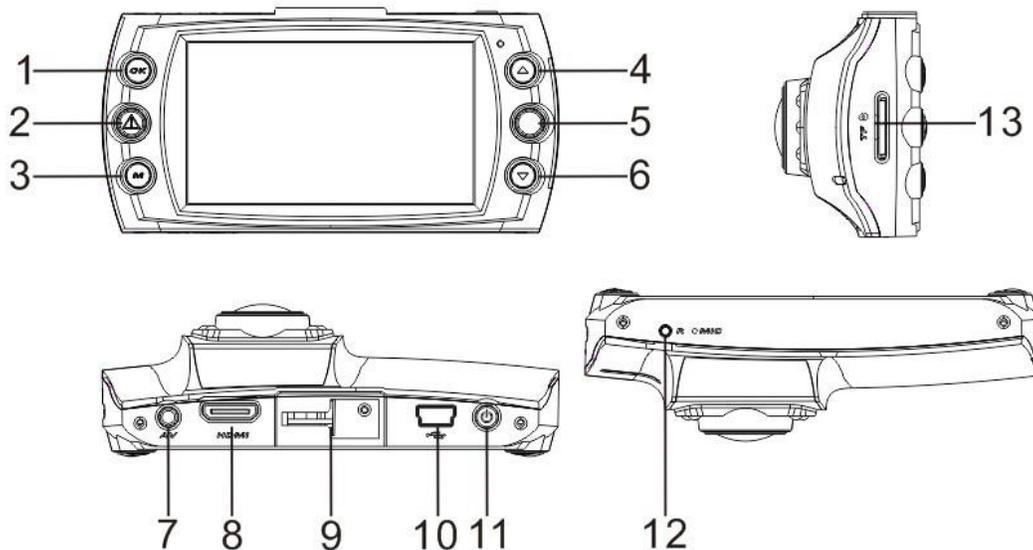

DESCRIPTION OF BUTTONS

- | | |
|-------------------------|---------------------|
| 1. OK | |
| 2. Emergency key | |
| 3. Menu | |
| 4. UP | |
| 5. Park Monitor | |
| 6. DOWN | |
| 7. External Camera Port | |
| | 8. HDMI |
| | 9. Mount Entry |
| | 10. USB PORT |
| | 11. Power Key |
| | 12. Reset |
| | 13. SD/TF card slot |

SETTING DATE & TIME

1. Make sure camera is in "Standby Mode" (On video screen but not recording)
2. Short press "Menu" button
3. Short press "DOWN" 14 times or until "Date" is highlighted
4. Short press "OK" button
5. Short press "UP" or "DOWN" to change year if needed



6. Short press "Park Monitor" to switch to next field (Repeat step 4 and 5 to change other categories)

Viewing Videos & Pictures

1. Make sure camera is in "Standby Mode" (On video screen but not recording)
2. Long press "Menu" button for 3 to 5 seconds this will put your camera into photo mode (The symbol in the upper left hand corner should change from a red video camera to a white square with a picture in it)
3. Long press "Menu" button for 3 to 5 seconds again and camera will switch into play back mode (The symbol in the upper left hand corner should change to a light blue square with a play arrow inside)
4. Short press the "UP" or "DOWN" button to scroll through videos and pictures
5. Short press "OK" button to play videos
6. Short Press "Menu" button to delete videos (That are not locked) and pictures

Picture in Picture (Second Camera Control)

1. Make sure camera is in "Standby Mode" (On video screen but not recording)
2. Plug the external camera into the "External Camera Port " (A small picture should appear in the upper right hand side of the screen)
3. Short press "UP" button 1 time to make external camera the main picture and the main camera the smaller picture
4. Short press "UP" button again to make the external camera the only picture
5. Short press "UP" button again to make the main camera the only picture



Emergency Record (S.O.S. Recording)

1. Make sure camera is in record mode
2. While camera is recording short press "Emergency key " (A lock should appear in the upper right hand corner of the screen)
3. The camera has now locked the video and the only way to erase the video is by formatting the camera

Move Detect (Motion Detect)

1. Make sure camera is in "Standby Mode" (On video screen but not recording)
2. Short press "Menu" button to enter menu
3. Short press "DOWN" button 3 times or until "Move Detect" is highlighted
4. Short press "OK" button to check box or uncheck box (Checked box means camera is in motion detect mode)
5. Short press "Menu" button to exit menu