

Operation Manual

PMP Series FM Transmitter

KEY FEATURES:

- LCD Display Screen
- Built in Wireless FM Transmitter 206 Channel Freq Capable (87.5~108Mhz)
- USB/SD Card Compatible
- Supports folder switch
- Fully Adjustable Arm for Multi Angle Viewing
- Wireless Full Function Remote Control
- Cigarette Lighter DC 12 Volt Compatible

USING THE FM TRANSMITTER:

- ※ Insert this FM transmitter into your vehicle's cigarette lighter or power port
- ※ Tune to your radio to a desired FM frequency, then match that same frequency on to the player by using the buttons on the unit or on the remote control.
- ※ Plug USB disk or SD card into this product, It will play and transmit the Mp3 files automatic. (You have to copy the MP3 files into the USB disk or SD card in advance.)



PYLE®

www.PyleAudio.com

QUICK GUIDE:

Operation Guide	FM transmitter	Remote Controller
1.How to play and stop the music	Press "PLAY" Button : Play the music Second Press "PLAY" Button: Stop	Press PLAY/PAUSE Button
2.How to adjust the Volume	Long Press "▶▶" button :Increase the Volume; Long press "◀◀" Button :Decrease the Volume	Press "VOL+" Increase the Volume; Press "VOL-" reduce the Volume;
3.How to change the frequency	Press "B+": increase the frequency Press "A-": decrease the frequency	Press "CH+" button: Increase 0.1MHZ Press "CH-" button: reduce 0.1MHZ Or press the number of the frequency what you desired, press"CH" confirm
4.How to choose music	Short Press "▶▶"Button: Play the next song; Short Press "◀◀" Button: Play the previous song;	Press "NEXT"Button: Play the next song; Press "PREV" Button: Play the previous song; Or press the serial number of the song directly
5.How to set EQ	Nonsupport	Press "EQ" button to switch your favorite EQ
6.How to change loop mode	Long press "play/pause" button, four loop modes optional: folder, single, random, all	Nonsupport
7.How to switch folder	Nonsupport	Press "folder+" or "folder -"